
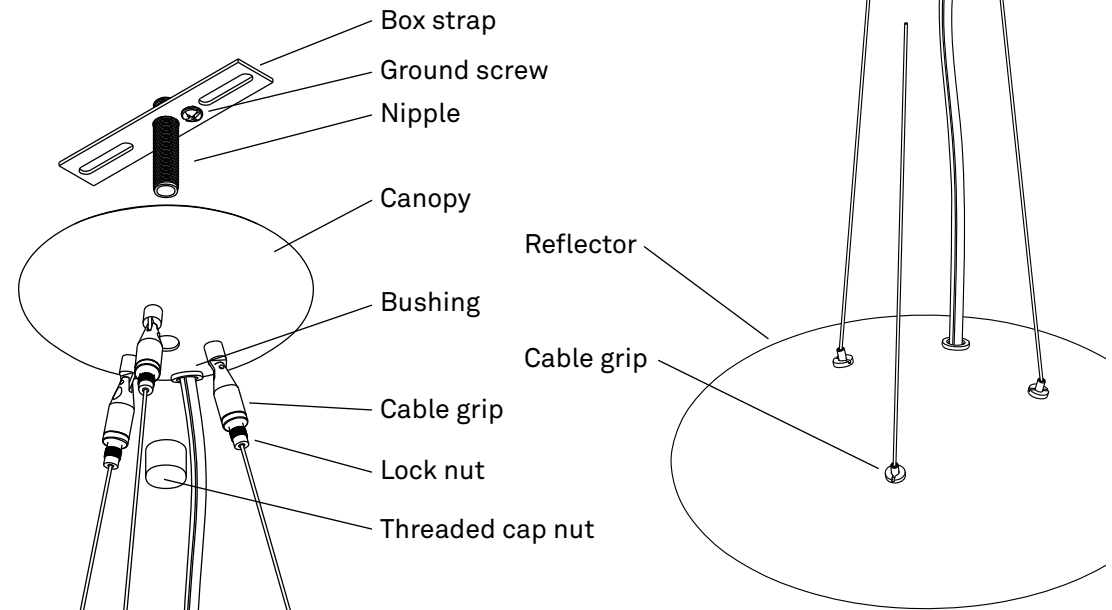


ASSEMBLY INSTRUCTIONS

BLOOM LED

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION

1. Mount the box strap to the junction box.
2. Run electrical wires through the bushing in the canopy.
3. Tie strain relief knot in electrical cord inside the canopy per illustration.
4. Make electrical connections per wiring diagram.
5. Affix the canopy to the box strap nipple with threaded cap nut.
6. Loosen the cable grip lock nuts and push each cable end through. Continuing to push the cables through, raise the fixture to the desired height.
7. Loosen cable set screws in the upper hub with the provided hex key.
8. Adjust the reflector to the approximate desired position. Reflector can be raised freely. To lower reflector, push in the sleeves of the cable grips so it moves freely down the cables.

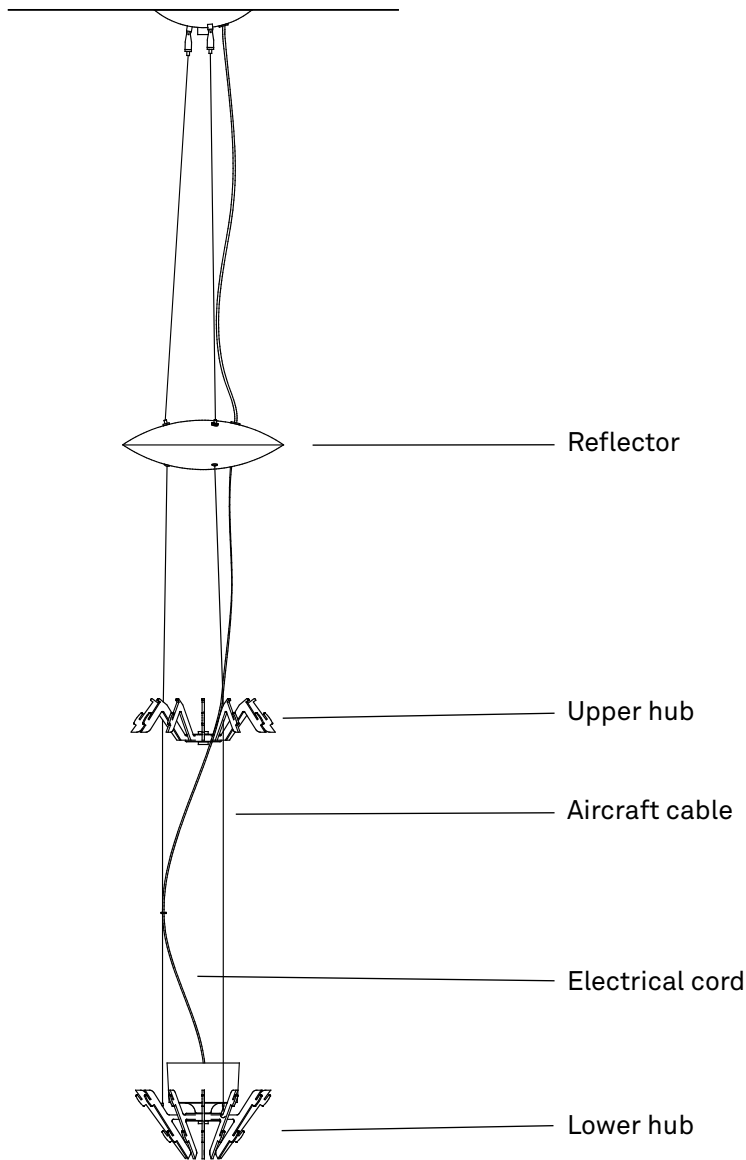


RESOLUTE

RESOLUTE is a registered trademark of MANIFESTO Corporation
4660 Ohio Avenue South, Unit C, Seattle WA 98134
www.resoluteonline.com info@resoluteusa.com




ASSEMBLY INSTRUCTIONS

BLOOM LED

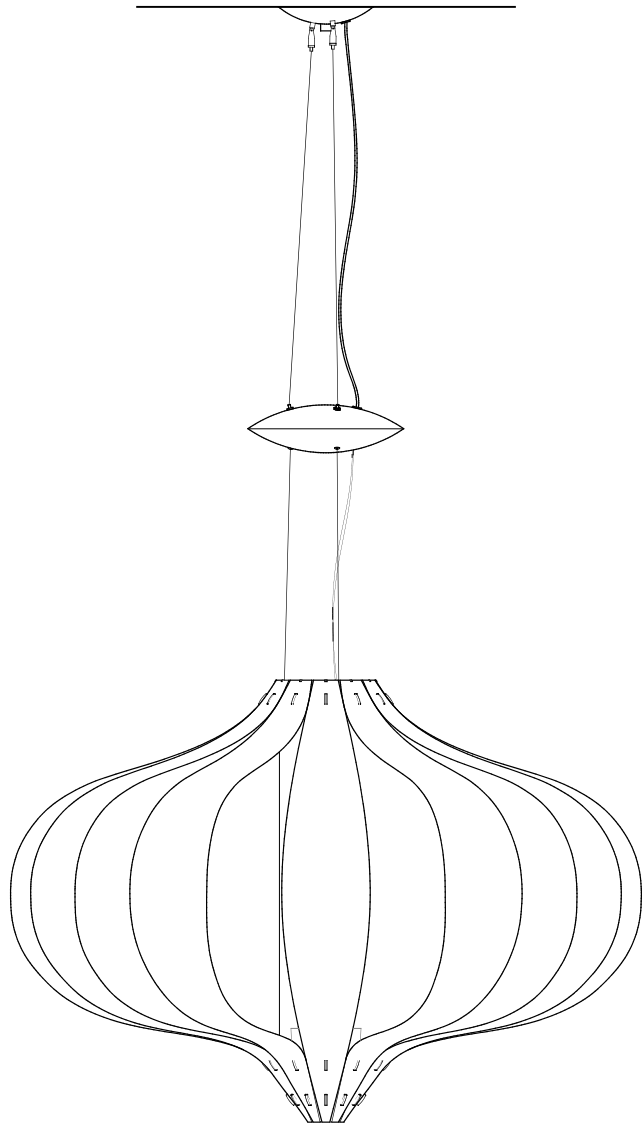

Installing leaf sections


1. Install the shade leaves by inserting upper hub arm hooks through the upper leaf slots and slide leaf downward to lock in place. Install one at a time alternating from side to side.
2. Repeat for lower hub.
3. Extend the shade to the desired position and tighten the cable set screws in upper hub.
4. Adjust the reflector to the desired position and level.
5. Make final adjustments to level the fixture by adjusting the cable grippers at the canopy end. Push lock nuts to release the cable, tighten lock nuts when level.
6. Push excess electrical wire into the canopy and reflector.
7. Trim the excess aircraft cable protruding from the cable grippers.

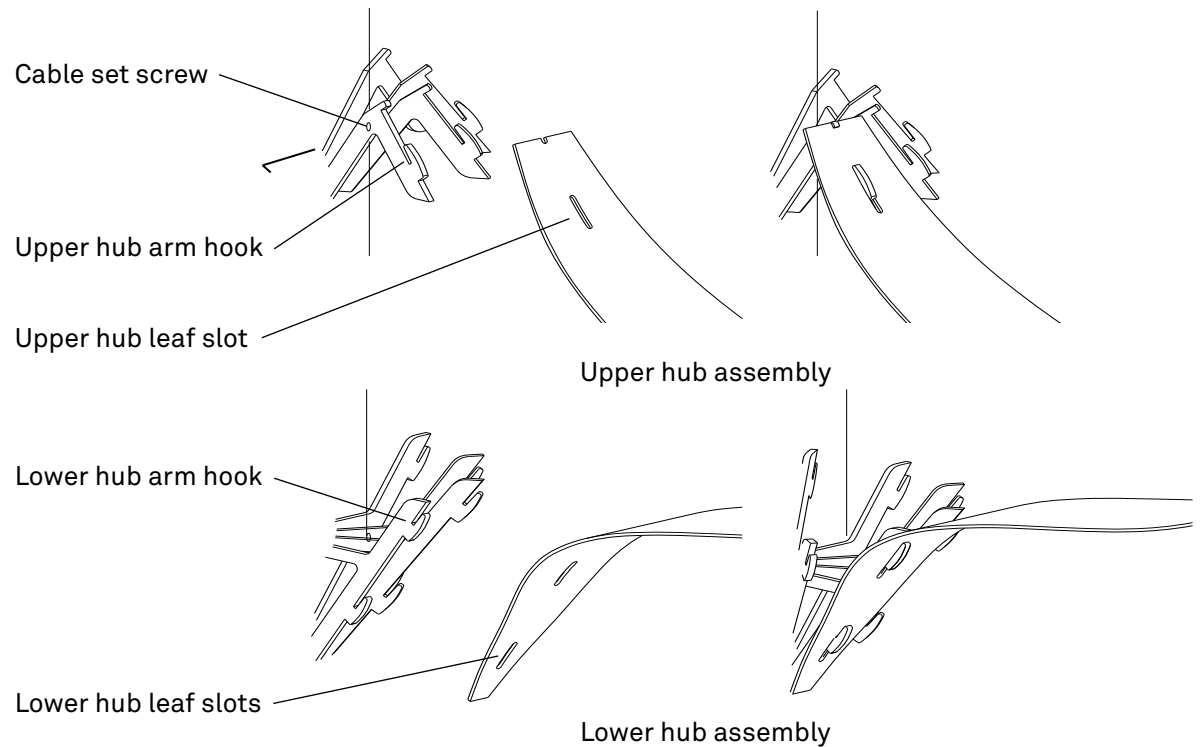

RESOLUTE

RESOLUTE is a registered trademark of MANIFESTO Corporation
4660 Ohio Avenue South, Unit C, Seattle WA 98134
www.resoluteonline.com info@resoluteusa.com



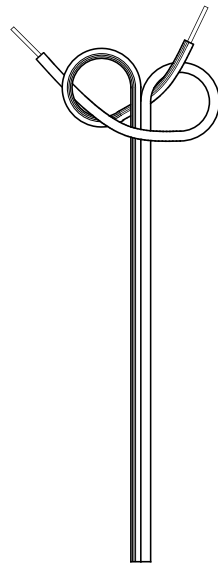

STRAIN RELIEF KNOT

