


# BOMBER INSTALLATION

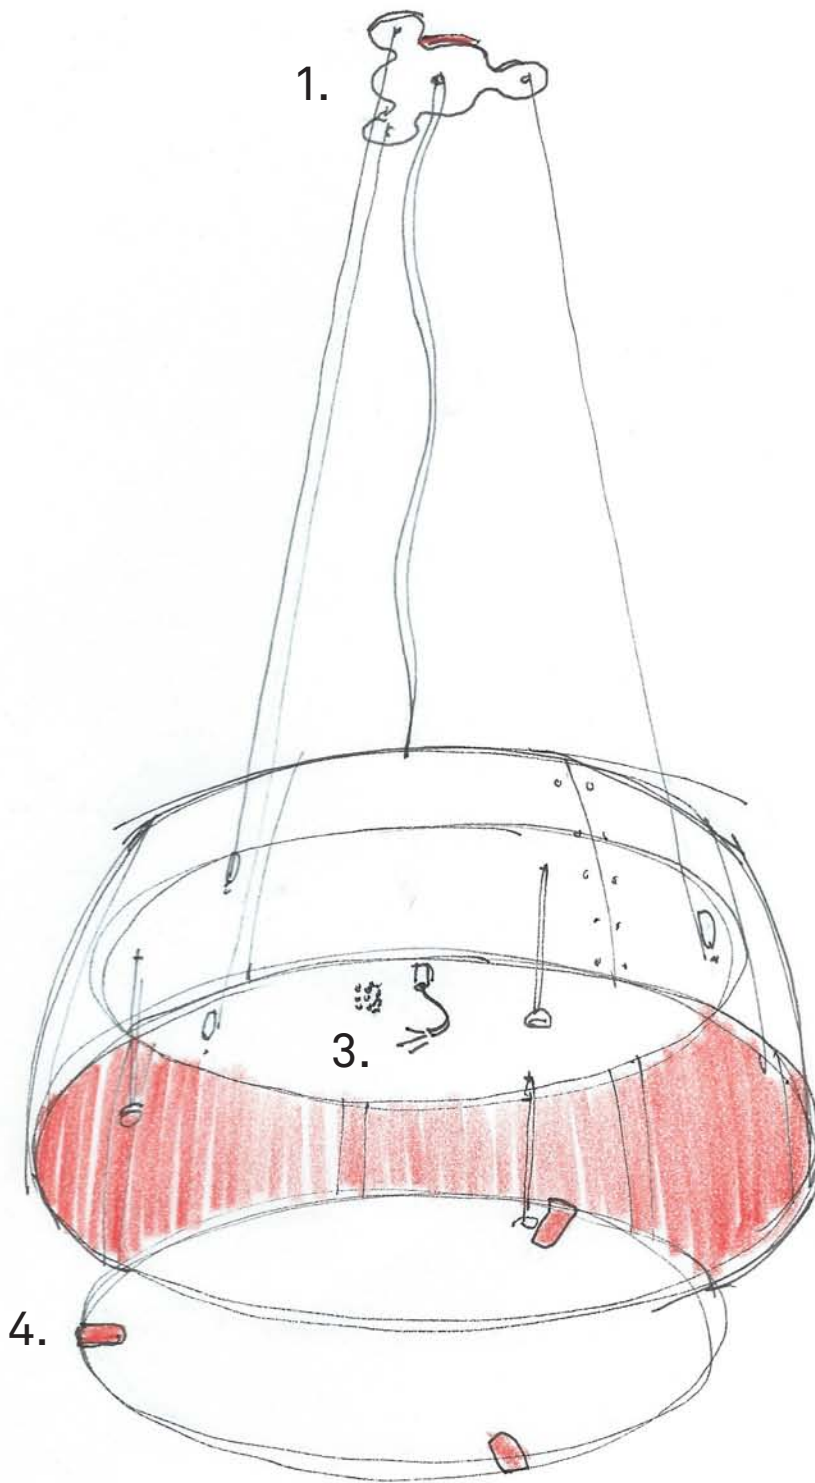

1. Install canopy  
Leave aircraft cables and power hanging.

2. Lift shade up to the hanging cables.  
One person lifting from inside is best.  
Lift by the array bed - not the shade.  
A second person can slip the aircraft cables into the cable grips on the upfacing side of the array bed. With all three cables in grips the shade can be gradually raised to the desired height. Clip excess cable.

3. Feed power through strain relief in center of array bed. Make connection with terminal block

2.

4. Install diffusion disk  
Disk is supported by three small clips.  
These "snap" on to the three magnetic posts.

5. Remove protective wrap on shade.

## RESOLUTE

info@resoluteusa.com  
www.resoluteonline.com