


ASSEMBLY INSTRUCTIONS

CFL IN-THE-WALL BALLAST

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION

1. Make electrical connections to ballast for feed side only per wiring diagram.
2. Put ballast in the double-deep 4" sq. junction box with mud ring as specified. NOTE: Ballast cannot be placed more than 8' (for remote mounting) from the fixture!
3. Attach box adapter to the junction box.
4. Make fixture end electrical connections per wiring diagram.
5. Affix canopy assembly to the box adapter/junction box assembly with the provided mounting screws.

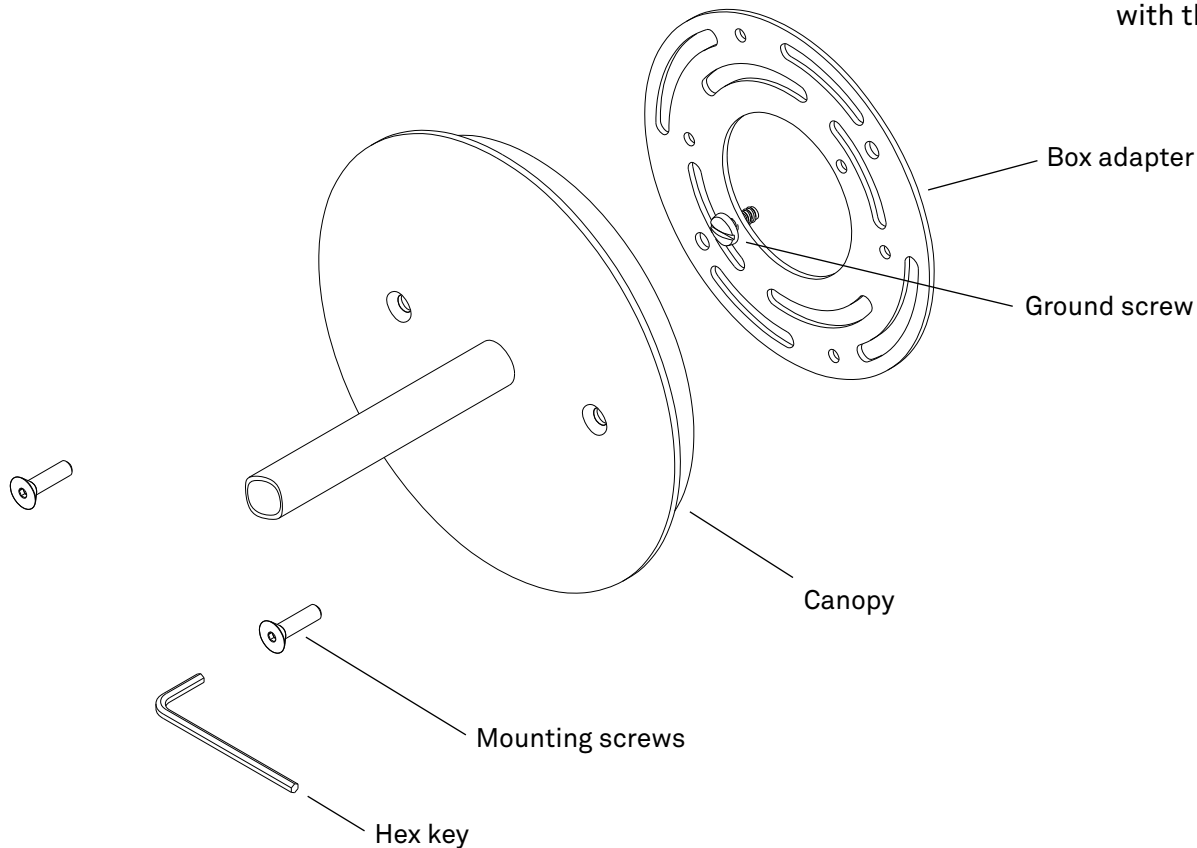

LAMP CONTAINS MERCURY
Manage in accordance with disposal laws
www.lamprecycle.org or 1-866-666-6850

RESOLUTE

RESOLUTE is a registered trademark of MANIFESTO Corporation
4660 Ohio Avenue South, Unit C, Seattle WA 98134
www.resoluteonline.com info@resoluteusa.com



