


ASSEMBLY INSTRUCTIONS

CFL PENDANT/ROUND

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION

1. Determine drop length. Measure, trim and strip electrical cord to the appropriate length.
2. Attach box adapter to the junction box.
3. Feed electrical cord through cord bushing in the canopy.
4. Make electrical connections per wiring diagram.
5. Affix canopy assembly to the box adapter/junction box assembly with the two mounting screws provided.
6. Feed aircraft cable through cable grip until desired drop length has been achieved.
7. Push any excess electrical wire into the canopy and trim excess aircraft cable.

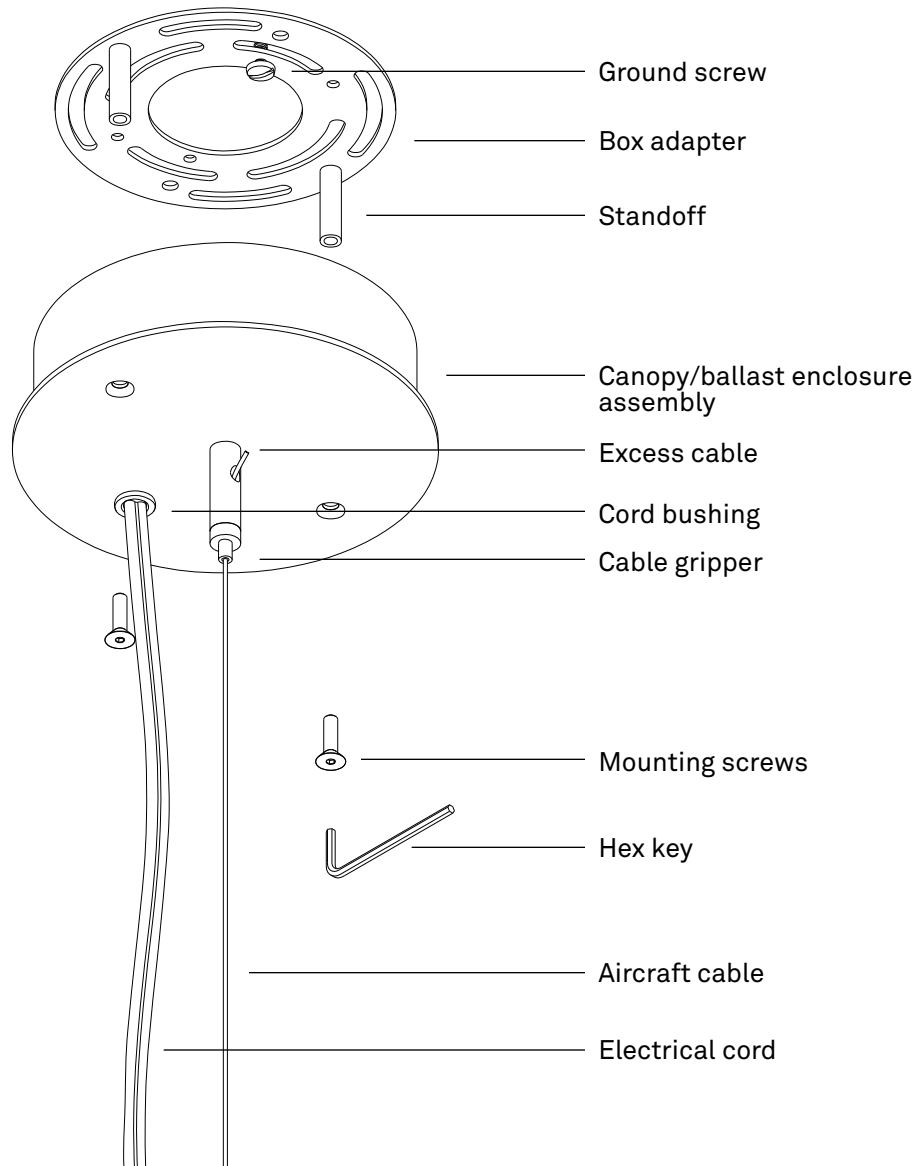

RESOLUTE

RESOLUTE is a registered trademark of MANIFESTO Corporation
4660 Ohio Avenue South, Unit C, Seattle WA 98134
www.resoluteonline.com info@resoluteusa.com



