

ASSEMBLY INSTRUCTIONS

BALLARD

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION

1. Install canopy assembly in correct orientation using included box adapter (not pictured). Posts should be vertical for Ballard 66 / 88 and horizontal for Ballard 125.
2. Keeping the shade and frosted diffusion together, install both on the canopy assembly as shown in the photo sequence.
3. The tabs on the back of the frosted diffusion must register on the alignment posts. When this is done correctly the shade will be straight and you will hear the magnets click into place against the canopy.
4. Make sure the frosted diffusion is correctly aligned behind the shade as shown below.



Frosted diffusion

Shade


Magnet

Canopy assembly


Alignment post

Alignment tabs
(part of frosted diffusion)

Canopy assembly

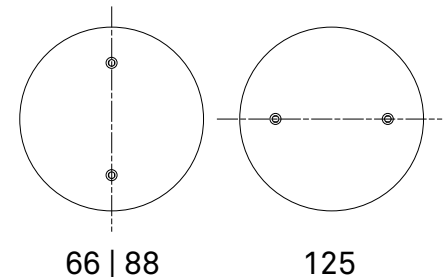

Correct Diffusion Alignment

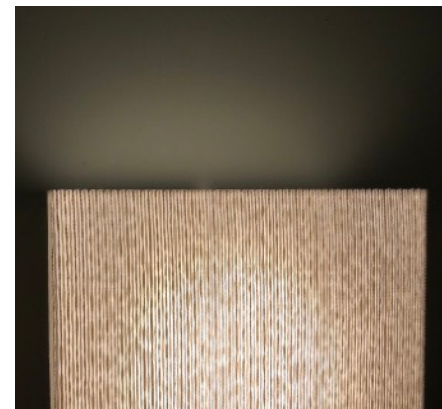

Incorrect Diffusion Alignment



RESOLUTE

RESOLUTE is a registered trademark of MANIFESTO Corporation
4617 Colorado Avenue South, Unit A, Seattle WA 98134
www.resoluteonline.com info@resoluteusa.com

