


# ASSEMBLY INSTRUCTIONS

## D1/D2/D3

**DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION**

1. Mount the wall adapter plate to the junction box.
2. Make electrical connections per wiring diagram.
3. Attach the back box to the wall adapter plate/junction box assembly with the provided mounting screws. Lamp socket may be placed in either up or down facing configuration.
4. Insert the lamp into the lamp socket.
5. Push the shade onto the back box and seat onto the back box shoulder.
6. Secure shade to back box with mounting studs through mounting stud holes on top and bottom of shade.

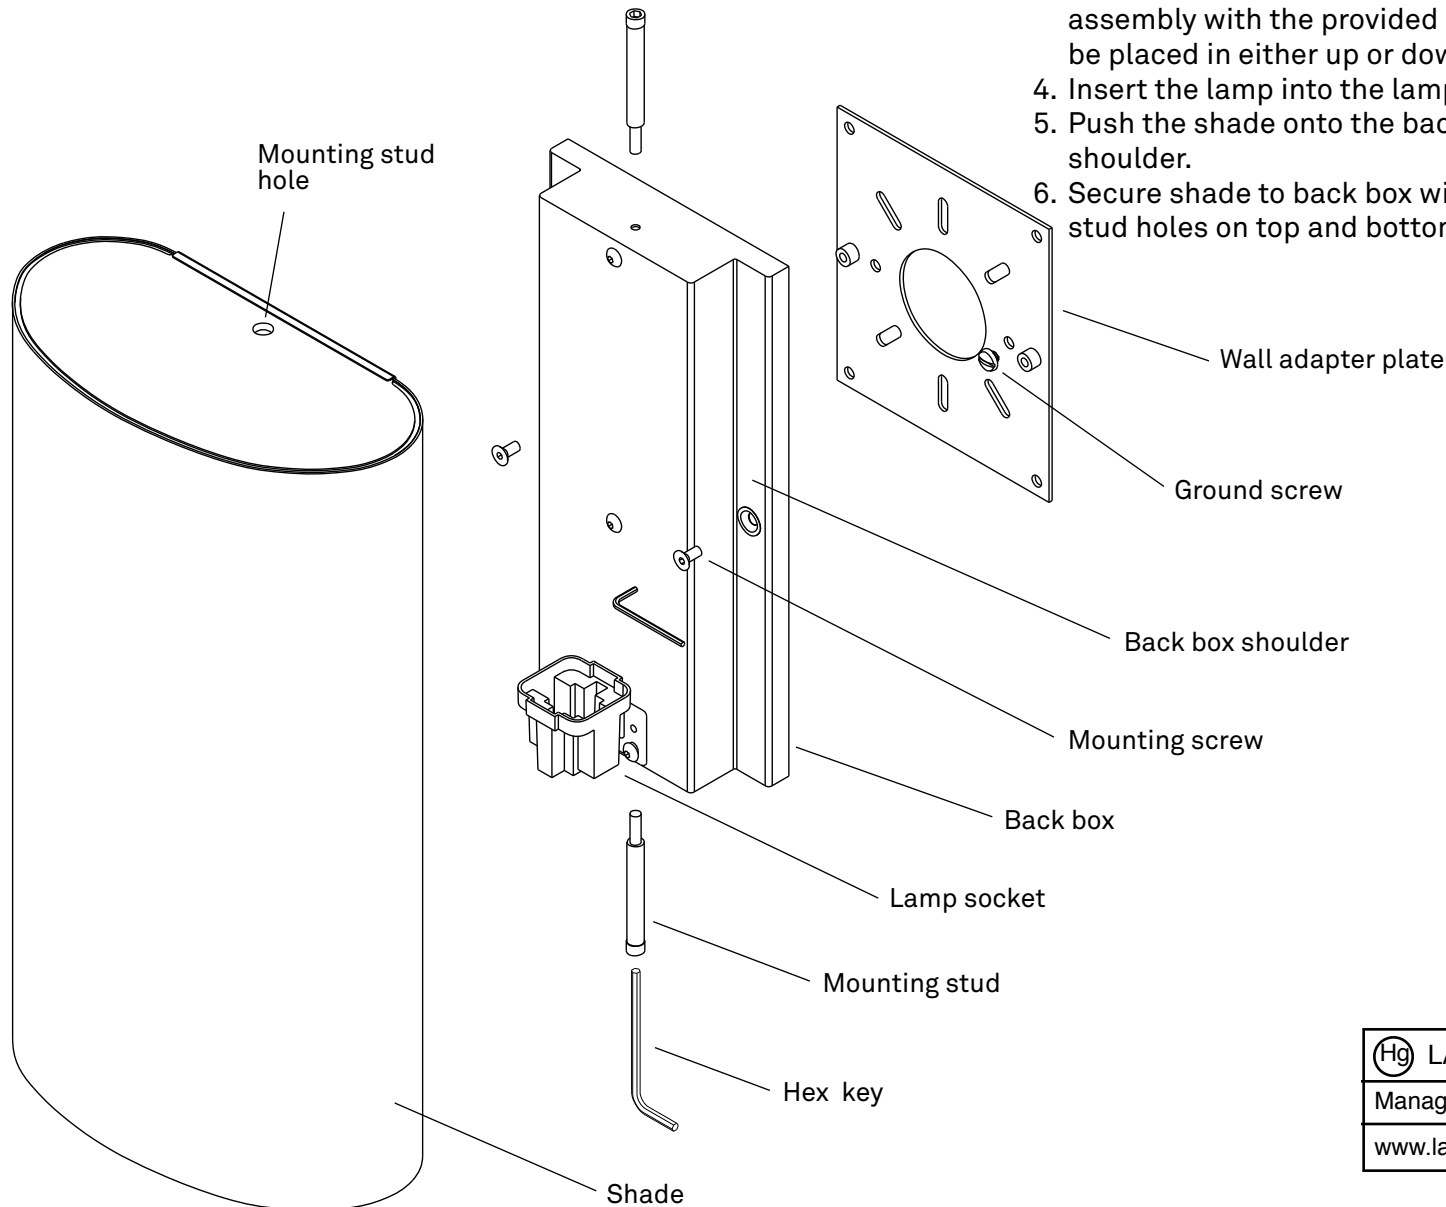

**(Hg) LAMP CONTAINS MERCURY**

Manage in accordance with disposal laws

[www.lamprecycle.org](http://www.lamprecycle.org) or 1-866-666-6850

# RESOLUTE

RESOLUTE is a registered trademark of MANIFESTO Corporation  
4660 Ohio Avenue South, Unit C, Seattle WA 98134  
[www.resoluteonline.com](http://www.resoluteonline.com) [info@resoluteusa.com](mailto:info@resoluteusa.com)



