


ASSEMBLY INSTRUCTIONS

SIMPLE RECTANGLE WALL

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION

1. Mount the back box to the junction box.
2. Make electrical connections per wiring diagram.
3. Affix faceplate assembly to the junction box/back box assembly with the four mounting screws provided.

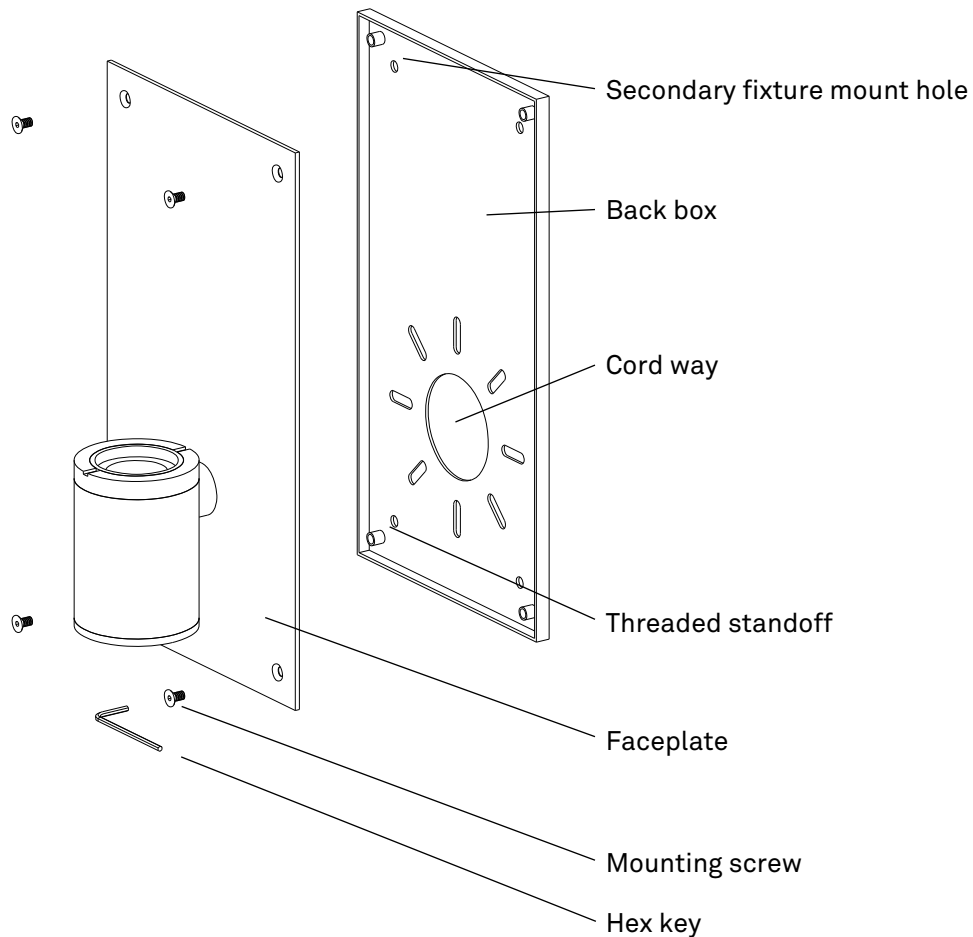

RESOLUTE

RESOLUTE is a registered trademark of
MANIFESTO Corporation, Seattle WA
www.resoluteonline.com info@resoluteusa.com



