


# ASSEMBLY INSTRUCTIONS

## D1/D2/D3 LED

**DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION**

1. Make electrical connections per wiring diagram.
2. Position the back box in the desired location over the junction box. Install one mounting screw, level fixture and install three remaining mounting screws.
3. Push the shade onto the back box and seat onto the back box shoulder.
4. Secure shade to back box with mounting studs through mounting stud holes on top and bottom of shade.

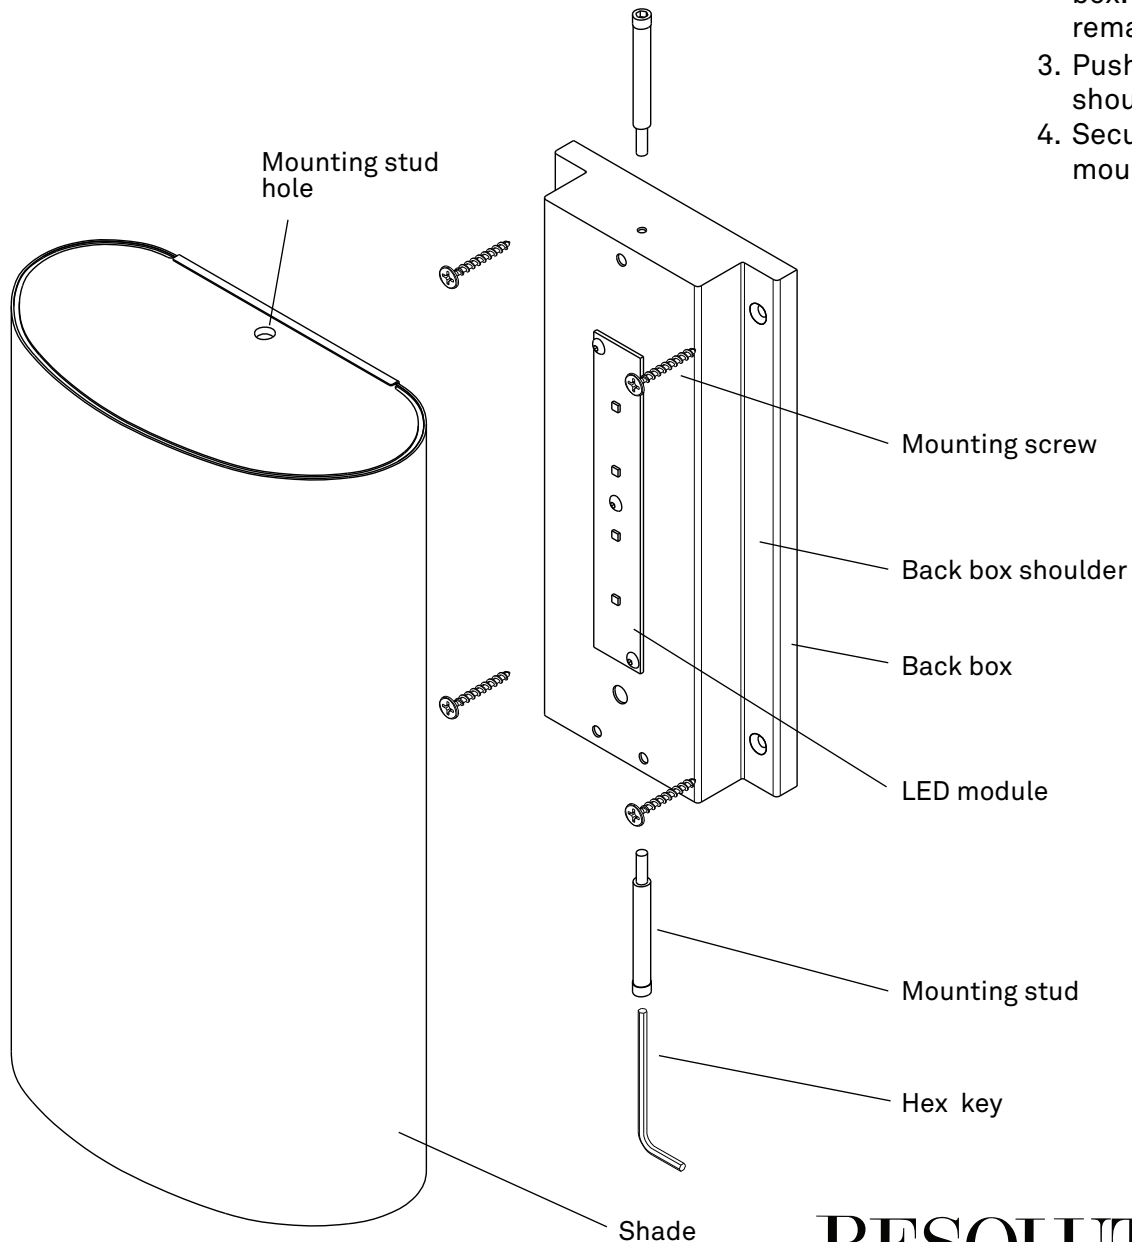


# RESOLUTE


RESOLUTE is a registered trademark of  
MANIFESTO Corporation, Seattle WA  
[www.resoluteonline.com](http://www.resoluteonline.com) [info@resoluteusa.com](mailto:info@resoluteusa.com)




# TRIAC/ELV 10% Dimming

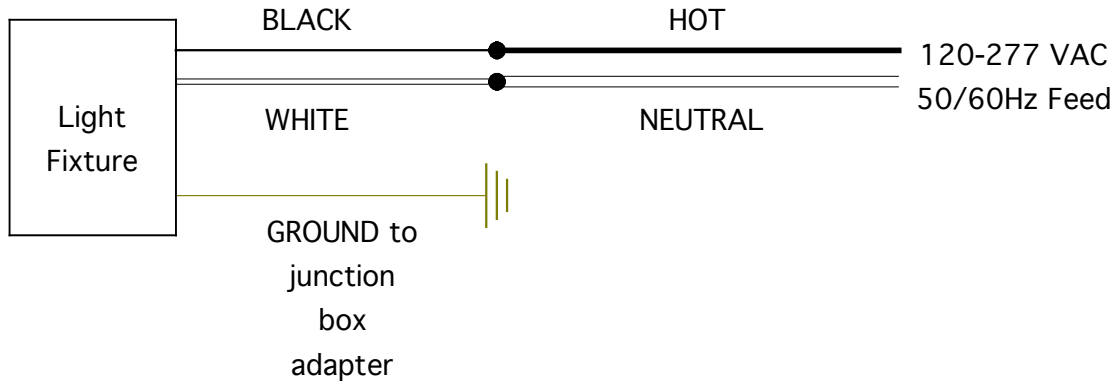

# 0-10V Dimming

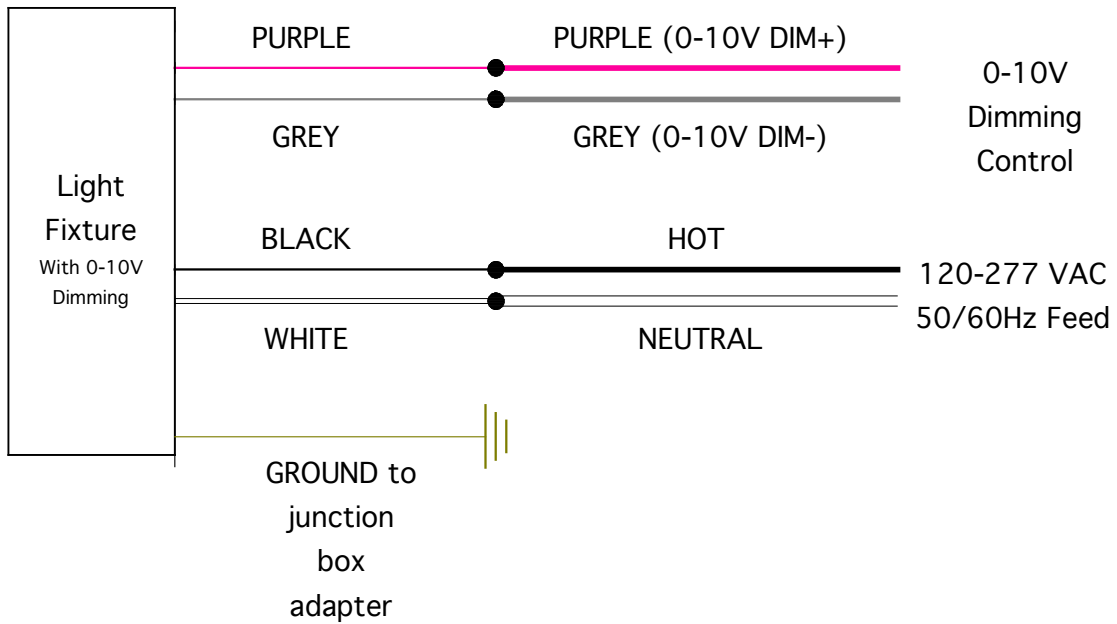

# Wiring for EcoSystem™ Digital Control\*\*

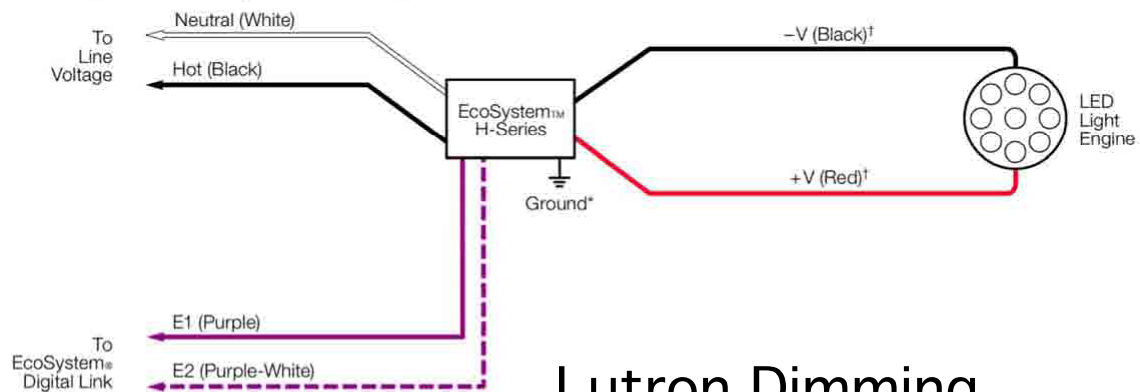

# Lutron Dimming

For Lutron 2-Wire Forward-Phase go to:

<http://www.lutron.com/TechnicalDocumentLibrary/041549.pdf>