
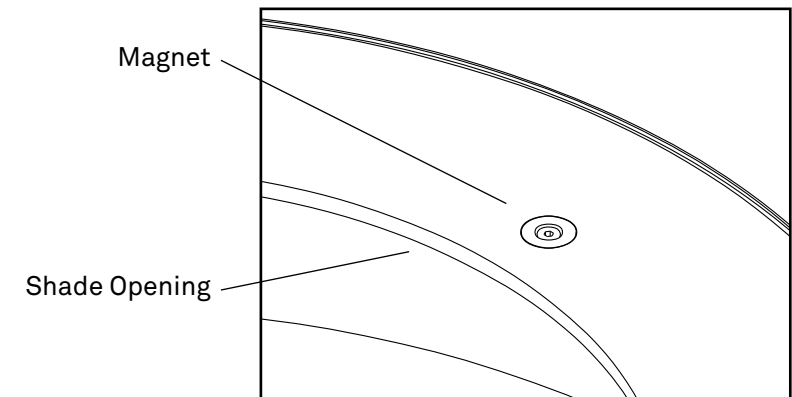


# ASSEMBLY INSTRUCTIONS

## CROWN HILL

**DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION**

1. Attach box strap to the junction box.
2. Make electrical connections per wiring diagram.
3. Affix illumination disk to the box strap/junction box assembly by slipping the nipple/cap assembly through the center hole and securing it to the box strap.
4. Raise shade up to array bed so that all three alignment posts clear the opening in the top of the shade. The shade will be correctly installed when the magnets in the top of the shade click into place against the array bed.

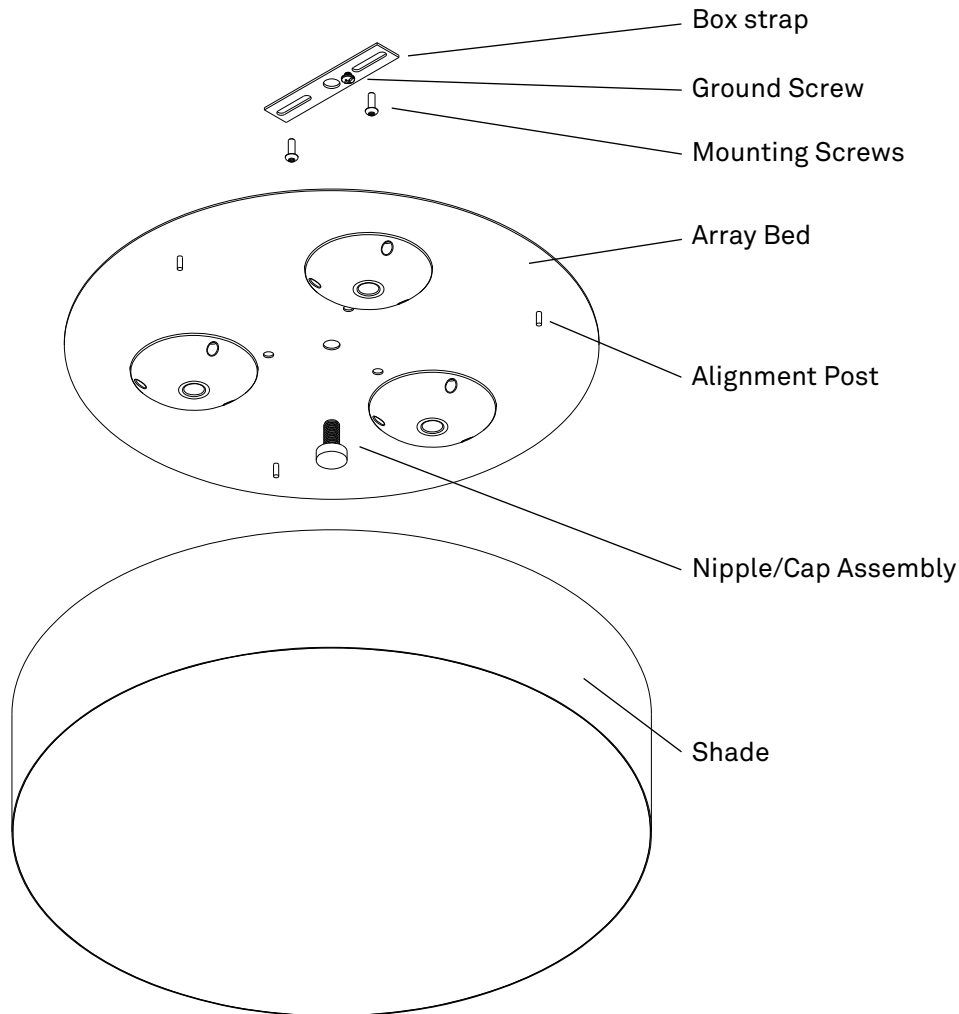

**RESOLUTE**

RESOLUTE is a registered trademark of  
MANIFESTO Corporation, Seattle WA  
[www.resoluteonline.com](http://www.resoluteonline.com) [info@resoluteusa.com](mailto:info@resoluteusa.com)



# TRIAC/ELV 10% Dimming

