


ASSEMBLY INSTRUCTIONS

SMITH 16/24/36 LED

**DANGER - RISK OF SHOCK - DISCONNECT
POWER BEFORE INSTALLATION**

1. Mount the back box to the junction box. Secure at both ends if necessary.
2. Make electrical connections per wiring diagram.
3. Attach the shade assembly to the back box with the four shade chassis mounting screws.
4. Instal end trim assemblies to the back box with end trim mounting screws.

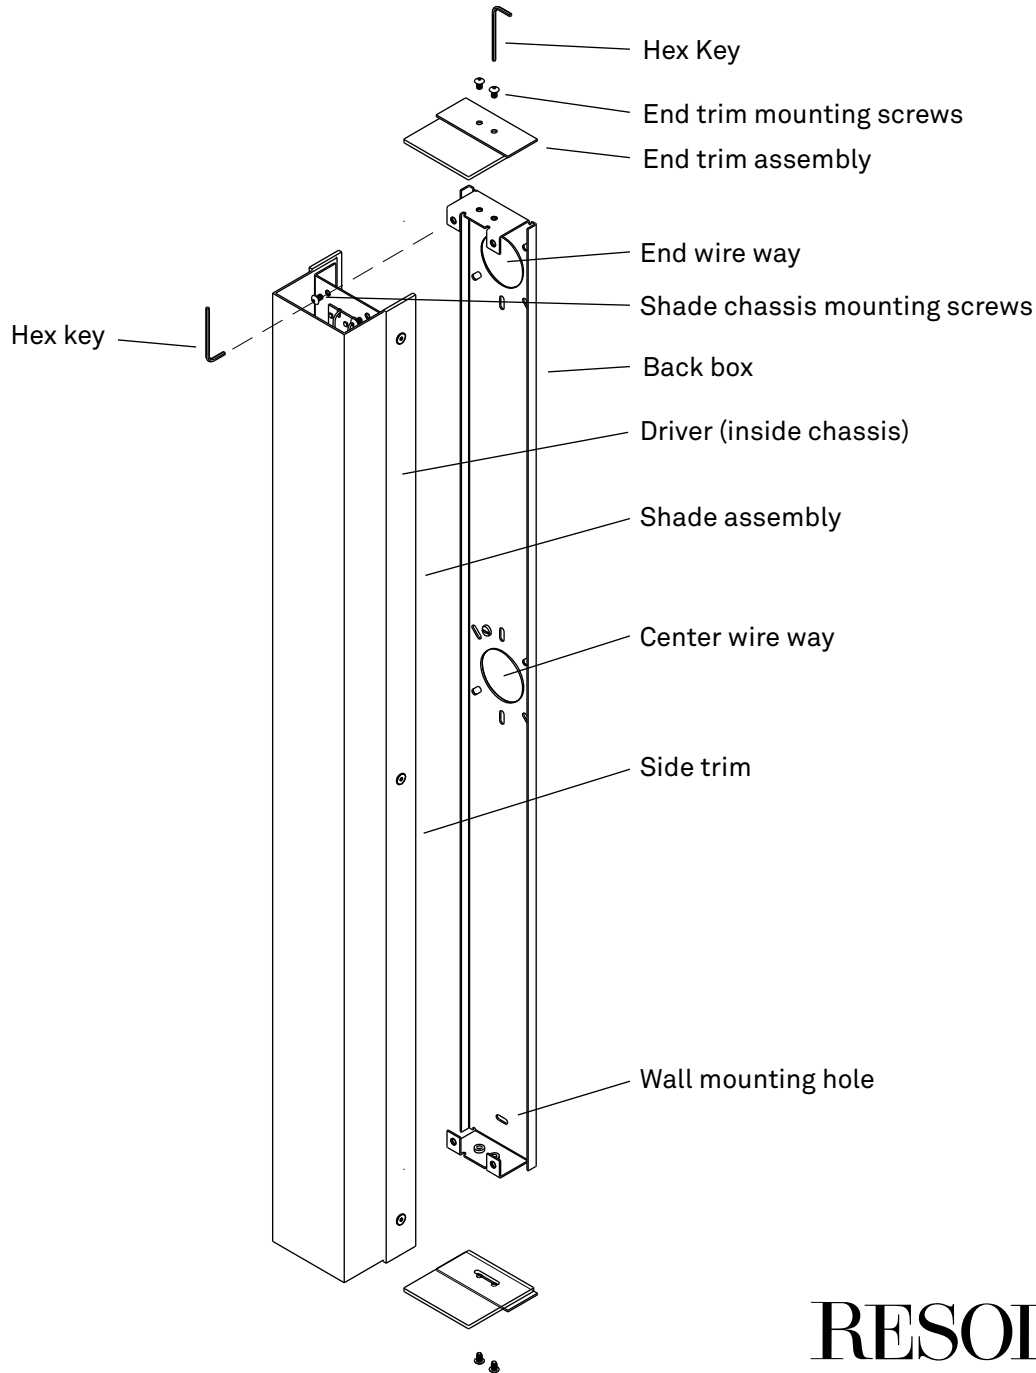


RESOLUTE


RESOLUTE is a registered trademark of MANIFESTO Corporation
4660 Ohio Avenue South, Unit C, Seattle WA 98134
www.resoluteonline.com info@resoluteusa.com




TRIAC/ELV 10% Dimming

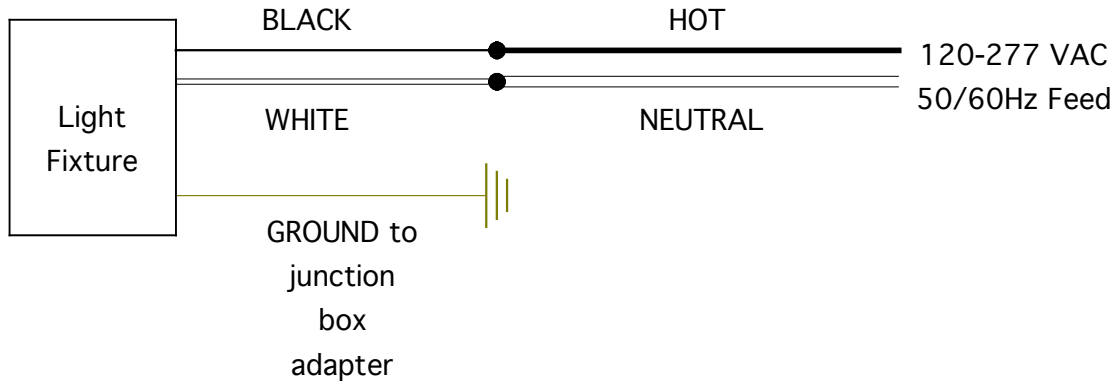

0-10V Dimming

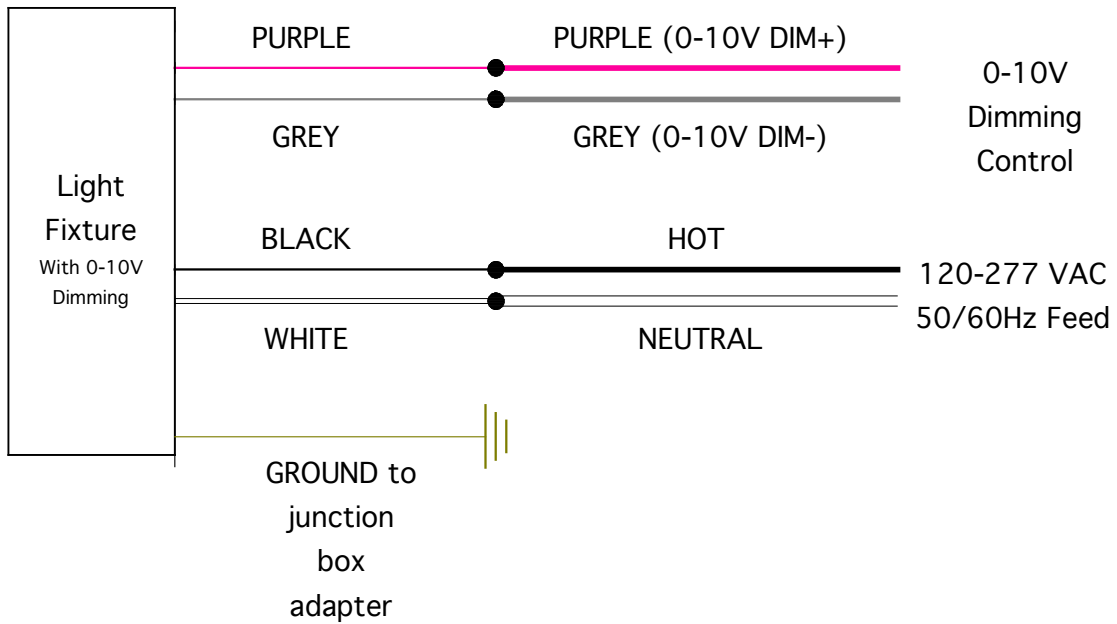

Wiring for EcoSystem™ Digital Control**

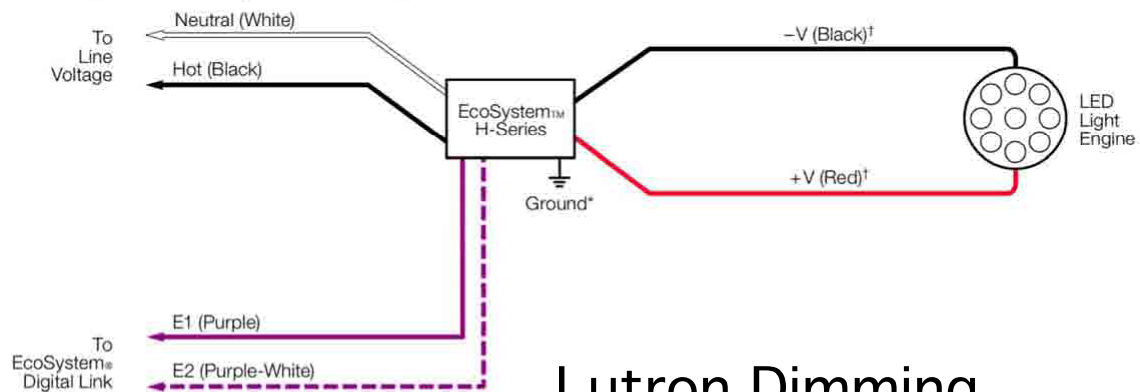

Lutron Dimming

For Lutron 2-Wire Forward-Phase go to:

<http://www.lutron.com/TechnicalDocumentLibrary/041549.pdf>