


ASSEMBLY INSTRUCTIONS

SMITH 28 CEILING LED

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION

1. Attach box adapter to the junction box.
2. Make electrical connections per wiring diagram.
3. Mount reflector/canopy assembly to box adapter using the two fixture mounting nuts. Tighten until canopy is snug against the ceiling.

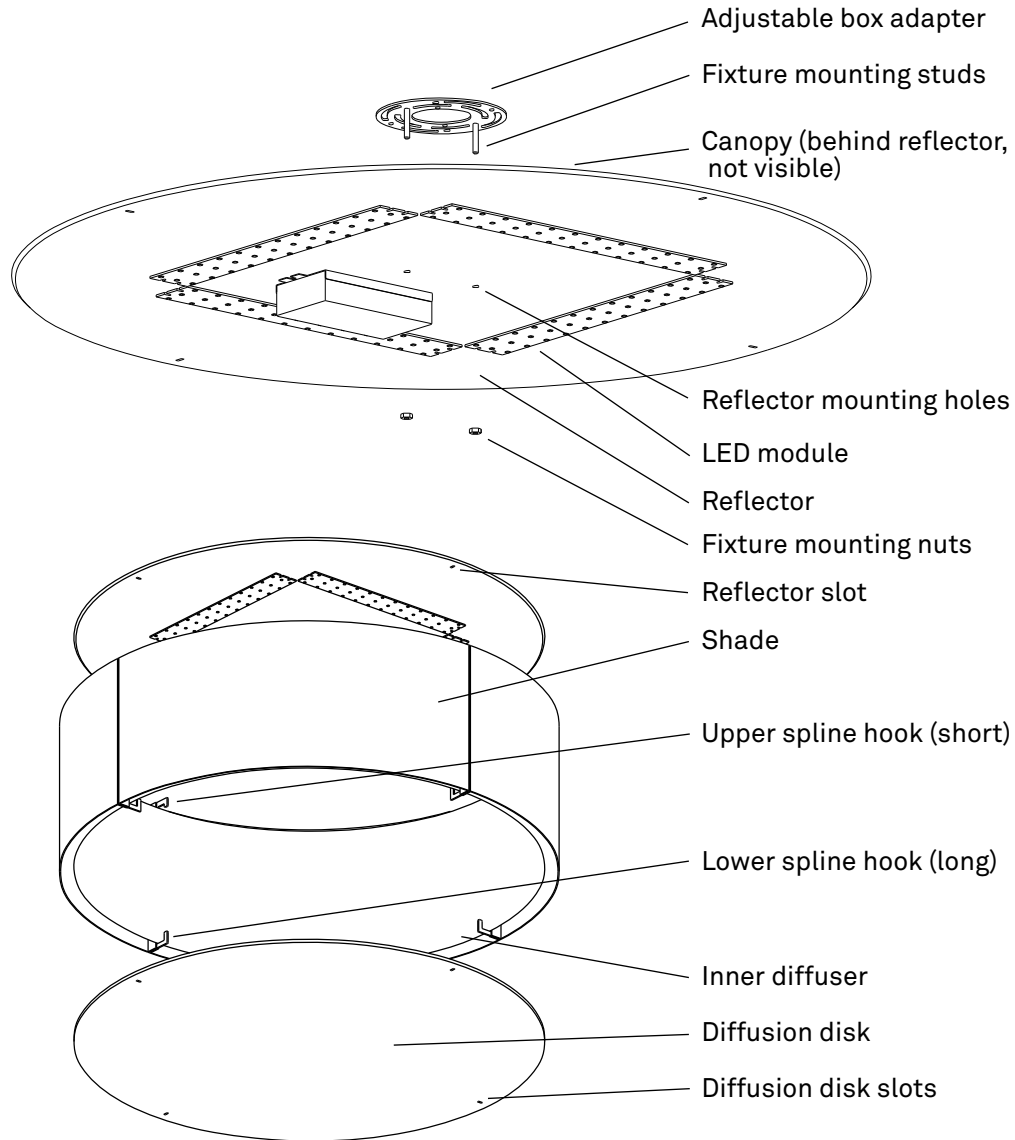


Installing shade assembly

4. Complete steps 1-3
5. Raise shade up so the upper spline hooks (short) are above the reflector.
6. Insert all four upper spline hooks into reflector slots.

Installing diffusion disk

7. Raise the diffusion disk up into the shade at an angle up and over three of the four lower spline hooks (long).
8. Continue to raise the diffusion disk inside shade so as to clear the fourth lower spline hook.
9. Lay diffusion disk flat and insert lower spline hooks into diffusion disk slots.

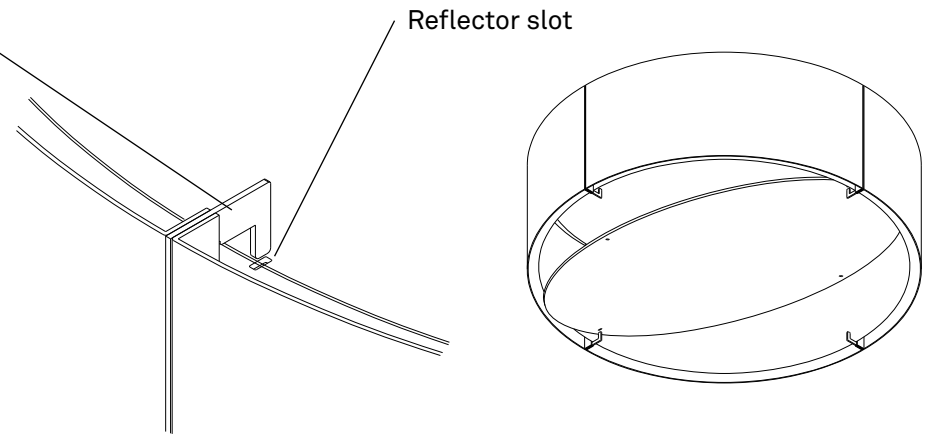


RESOLUTE


RESOLUTE is a registered trademark of
MANIFESTO Corporation, Seattle WA
www.resoluteonline.com info@resoluteusa.com




TRIAC/ELV 10% Dimming

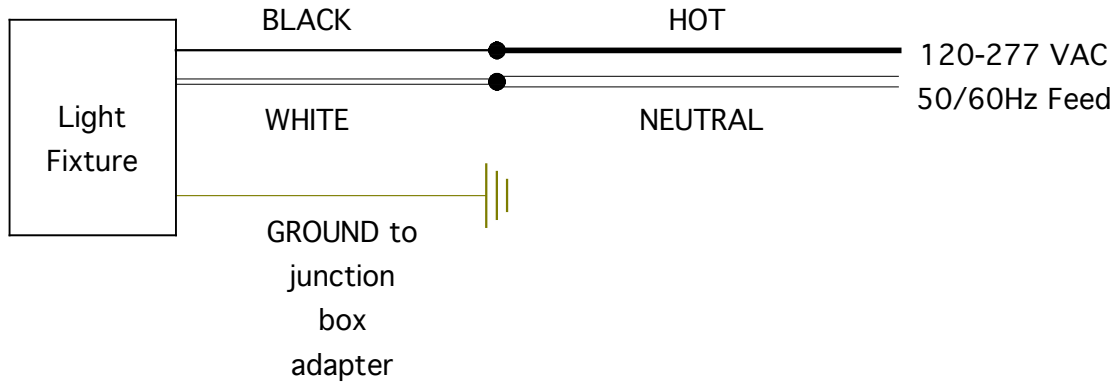

0-10V Dimming

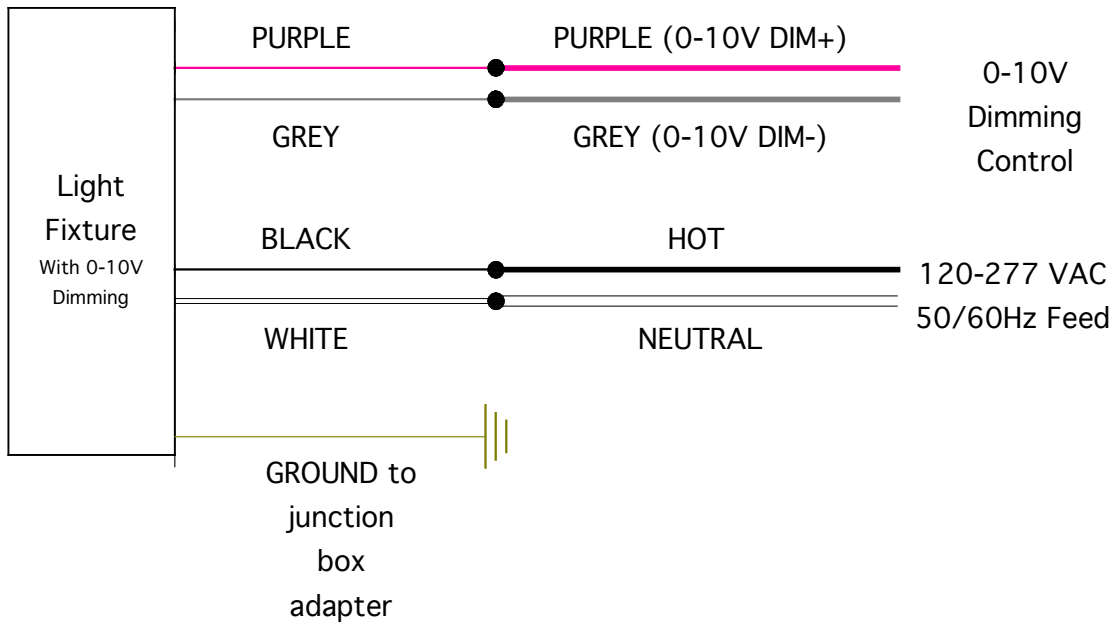

Wiring for EcoSystem™ Digital Control**

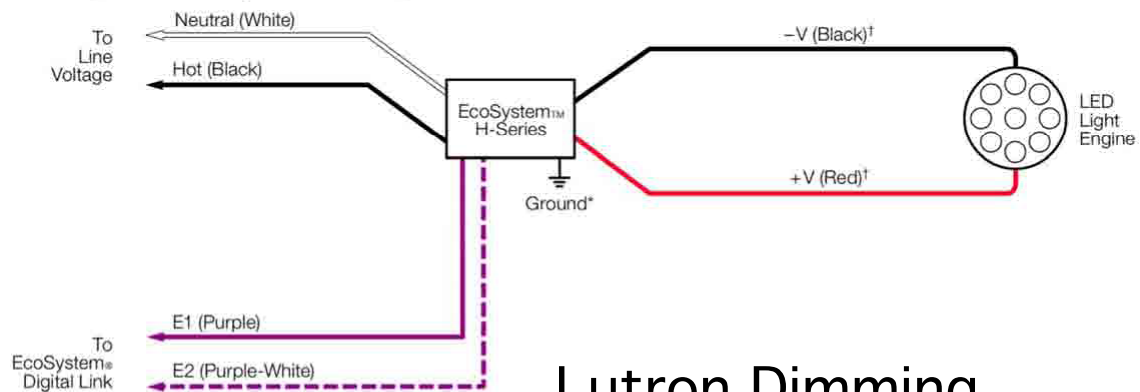

Lutron Dimming

For Lutron 2-Wire Forward-Phase go to:

<http://www.lutron.com/TechnicalDocumentLibrary/041549.pdf>