


ASSEMBLY INSTRUCTIONS

SMITH B1 & B2 LED

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION

1. Mount the wall plate to the junction box. Secure at both ends using additional mounting points if necessary.
2. Make electrical connections per wiring diagram.
3. Align the shade assembly over the wall plate and temporarily secure the shade assembly to the wall plate by threading one of the four shade assembly mounting screws through one of the shade assembly mounting holes into the corresponding shade assembly mounting point on the top end of the wall plate.
4. Install one of the side trim sections with two shade mounting screws on the side that does not have the mounting screw temporarily in place.
5. Remove the temporary screw.
6. Install the second trim strip section using the remaining two shade mounting screws.

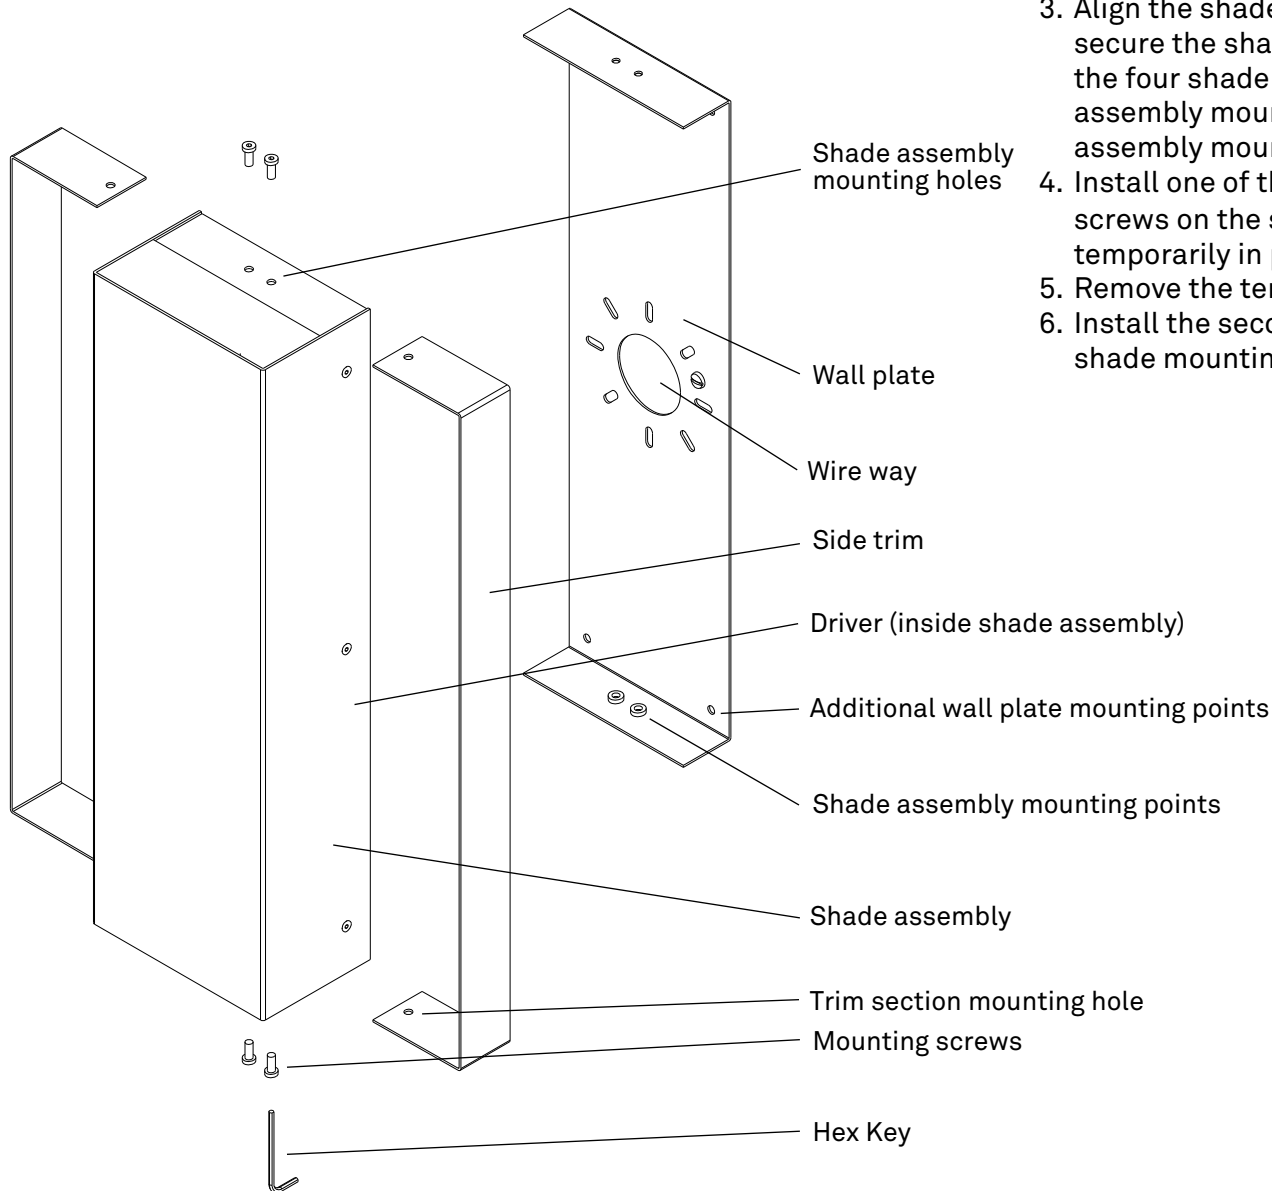


RESOLUTE


RESOLUTE is a registered trademark of
MANIFESTO Corporation, Seattle WA
www.resoluteonline.com info@resoluteusa.com




TRIAC/ELV 10% Dimming

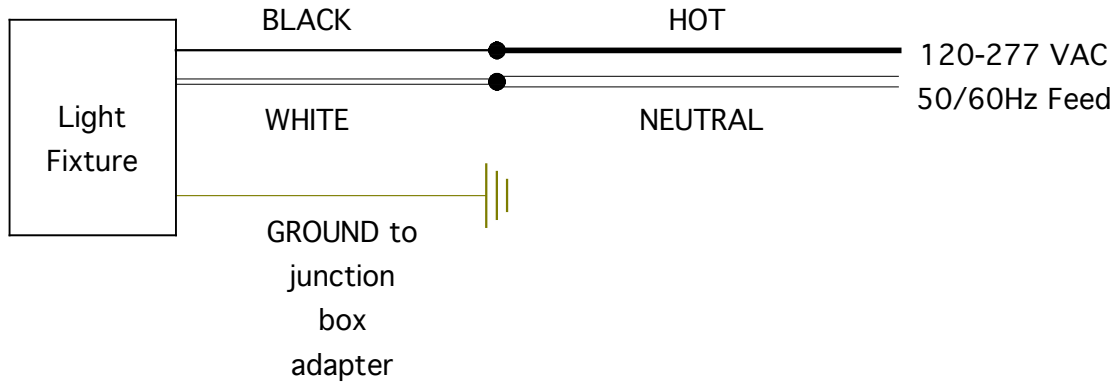

0-10V Dimming

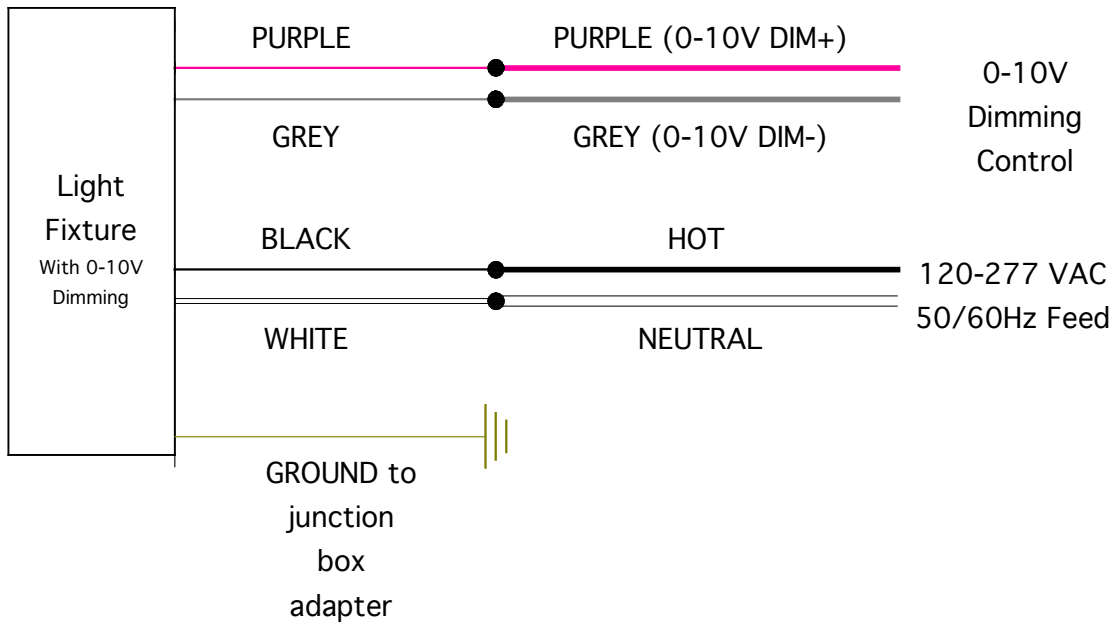

Wiring for EcoSystem™ Digital Control**

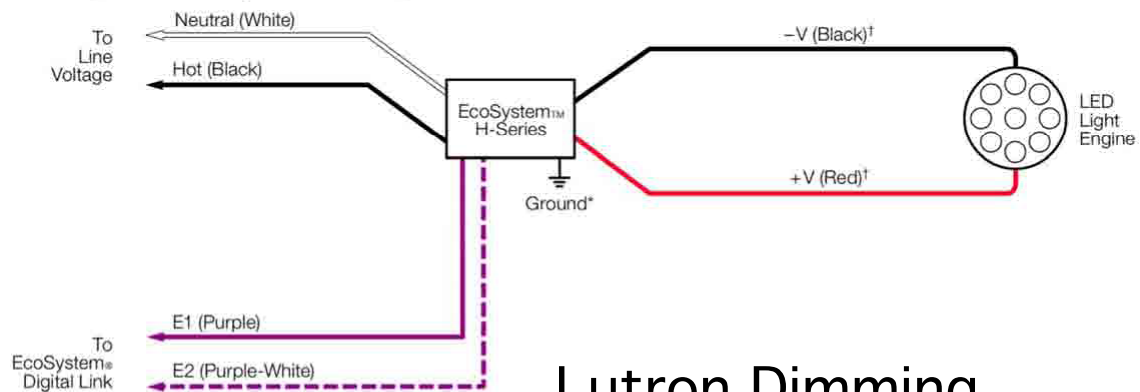

Lutron Dimming

For Lutron 2-Wire Forward-Phase go to:

<http://www.lutron.com/TechnicalDocumentLibrary/041549.pdf>