


ASSEMBLY INSTRUCTIONS

STELLA 15

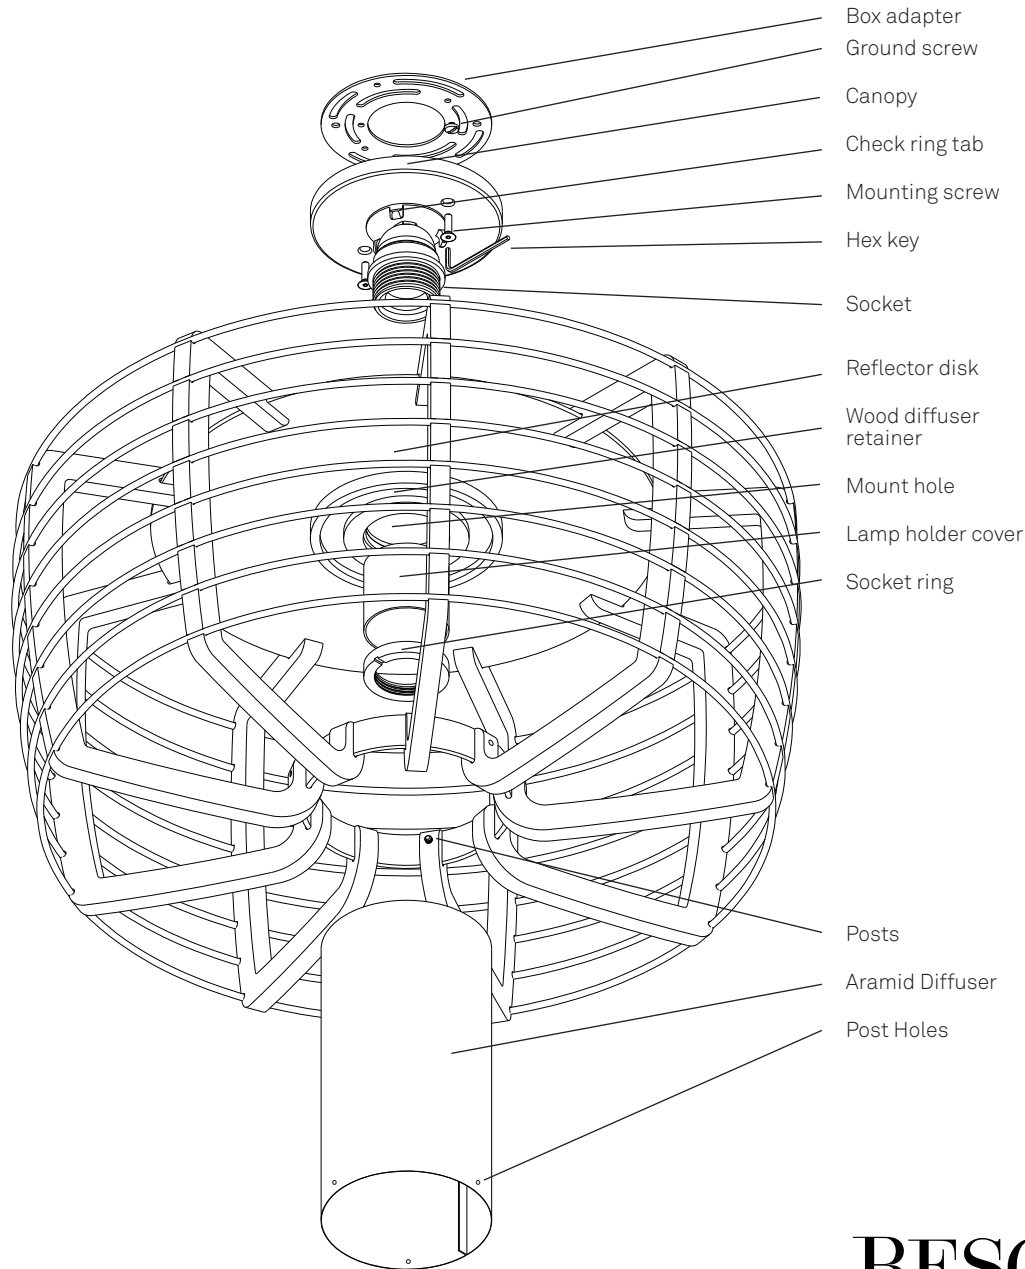

DANGER - RISK OF SHOCK DISCONNECT POWER PRIOR TO INSTALLATION

1. Attach box adapter to junction box
2. Make electrical connections per wiring diagram.
3. Affix canopy to the junction box/box adapter assembly with the two mounting screws provided.
4. Register the mount hole in the reflector disk over the three check ring tabs.
5. If necessary, hold reflector disk in place as you slip the cover tube over the socket and the check ring tabs.
6. Thread the socket ring onto the socket until the cover tube and faceplate are firmly held in place. Finger tighten only.
7. Insert aramid diffuser. Make sure the three holes in the diffuser are facing down and the top of the diffuser seats inside the wood diffuser retainer.
8. Register 3 diffuser holes on (3) posts to hold aramid diffuser in place.


RESOLUTE

RESOLUTE is a registered trademark of MANIFESTO corporation
4617 Colorado Avenue South, Unit A, Seattle WA 98134
www.resoluteonline.com info@resoluteusa.com



ASSEMBLY INSTRUCTIONS STELLA 15

TRIAC/ANALOG DIMMING

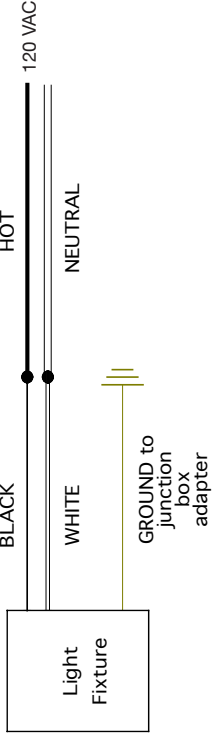

RESOLUTE

RESOLUTE is a registered trademark of MANIFESTO corporation
4617 Colorado Avenue South, Unit A, Seattle WA 98134
www.resoluteonline.com info@resoluteusa.com

